


NPN Silicon AF Power Transistor

Preliminary data

- Drain switch for RF power amplifier stages
- For AF driver and output stages
- High collector current
- Low collector-emitter saturation voltage

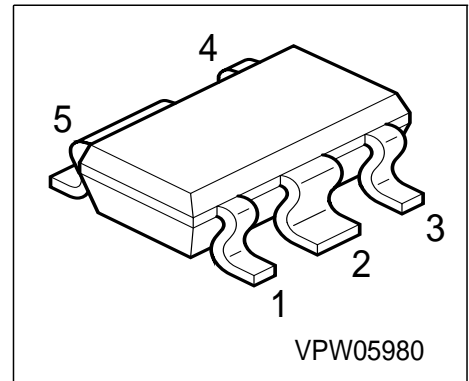

Type	Marking	Ordering Code	Pin Configuration					Package
BCP 71M	PCs	Q62702-C2597	1 = E	2 = C	3 = E	4 = B	5 = C	SCT-595

Maximum Ratings

Parameter	Symbol	Value	Unit
Collector-emitter voltage	V_{CEO}	32	V
Collector-base voltage	V_{CBO}	32	
Emitter-base voltage	V_{EBO}	5	
DC collector current	I_C	3	A
Peak collector current	I_{CM}	6	
Base current	I_B	200	mA
Peak base current	I_{BM}	500	
Total power dissipation, $T_S \leq 94 \text{ }^\circ\text{C}$	P_{tot}	1.7	W
Junction temperature	T_j	150	$^\circ\text{C}$
Storage temperature	T_{stg}	-65...+150	

Thermal Resistance

Junction ambient ¹⁾	R_{thJA}	≤ 88	K/W
Junction - soldering point	R_{thJS}	≤ 33	

1) Package mounted on pcb 40mm x 40mm x 1.5mm / 6cm² Cu


Electrical Characteristics at $T_A = 25^\circ\text{C}$, unless otherwise specified.

Parameter	Symbol	Values			Unit
		min.	typ.	max.	
DC Characteristics					
Collector-emitter breakdown voltage $I_C = 10 \text{ mA}, I_B = 0$	$V_{(BR)CEO}$	32	-	-	V
Collector-base breakdown voltage $I_C = 100 \mu\text{A}, I_B = 0$	$V_{(BR)CBO}$	32	-	-	
Emitter-base breakdown voltage $I_E = 10 \mu\text{A}, I_C = 0$	$V_{(BR)EBO}$	5	-	-	
Collector cutoff current $V_{CB} = 8 \text{ V}, I_E = 0$	I_{CBO}	-	-	100	nA
Collector cutoff current $V_{CB} = 8 \text{ V}, I_E = 0, T_A = 150^\circ\text{C}$	I_{CBO}	-	-	20	μA
Emitter cutoff current $V_{EB} = 4 \text{ V}, I_C = 0$	I_{EBO}	-	-	100	nA
DC current gain 1) $I_C = 10 \text{ mA}, V_{CE} = 5 \text{ V}$ $I_C = 500 \text{ mA}, V_{CE} = 1 \text{ V}$ $I_C = 2 \text{ A}, V_{CE} = 2 \text{ V}$	h_{FE}	25 85 50	- - -	- 475 -	-
Collector-emitter saturation voltage1) $I_C = 2 \text{ A}, I_B = 0.2 \text{ A}$	V_{CEsat}	-	0.18	-	V
Base-emitter saturation voltage 1) $I_C = 2 \text{ A}, I_B = 0.2 \text{ A}$	V_{BEsat}	-	-	1.2	V
AC Characteristics					
Transition frequency $I_C = 50 \text{ mA}, V_{CE} = 10 \text{ V}, f = 100 \text{ MHz}$	f_T	-	100	-	MHz
Collector-base capacitance $V_{CB} = 10 \text{ V}, f = 1 \text{ MHz}$	C_{cb}	-	80	-	pF


1) Pulse test: $t < 300\mu\text{s}; D < 2\%$

Total power dissipation $P_{tot} = f(T_A^*; T_S)$

* Package mounted on epoxy

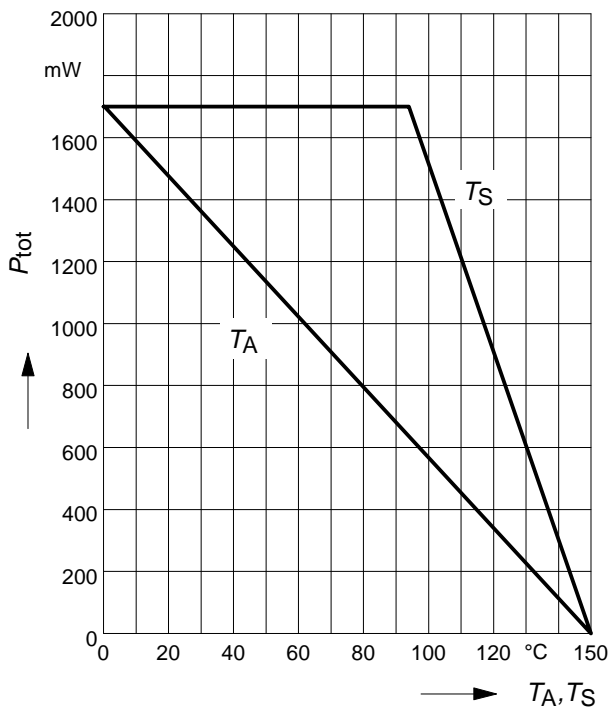


Permissible Pulse Load $R_{thJS} = f(t_p)$

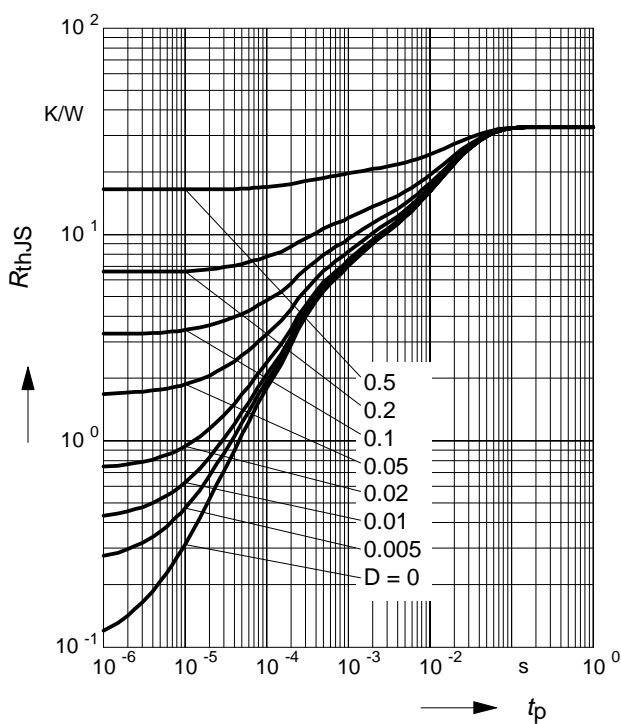


Permissible Pulse Load

$$P_{totmax} / P_{totDC} = f(t_p)$$

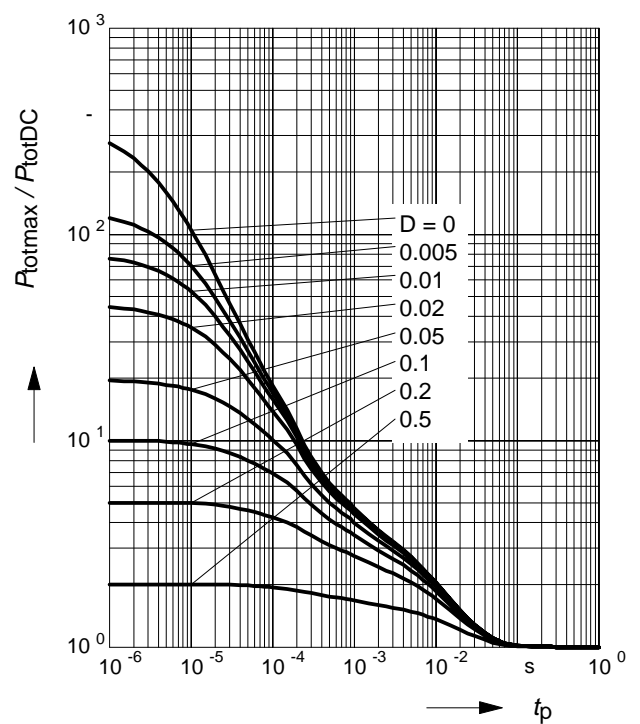


DC current gain $h_{FE} = f(I_C)$

$V_{CE} = 2V$

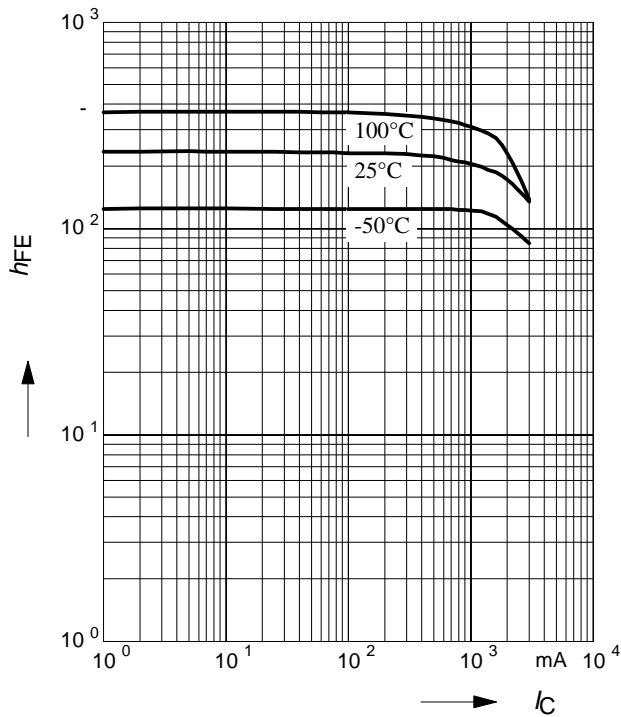


Collector-emitter saturation voltage

$I_C = f(V_{CEsat}), h_{FE} = 10$

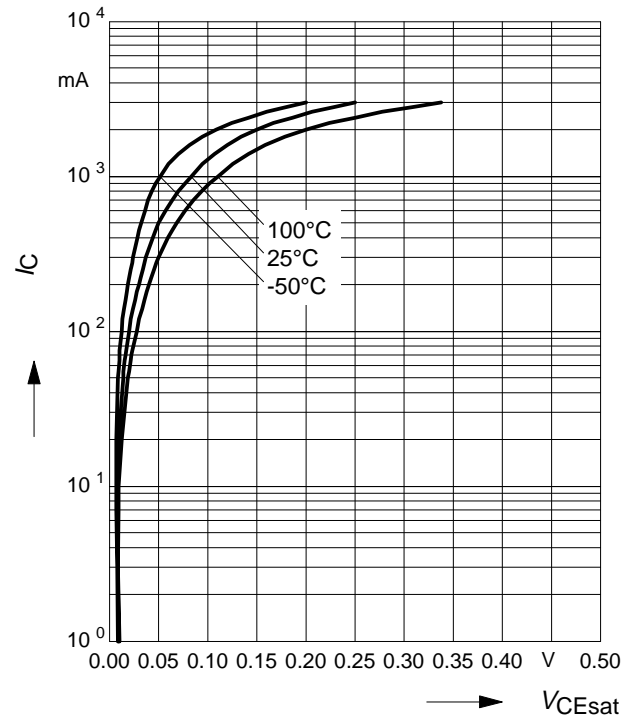


Base-emitter saturation voltage

$I_C = f(V_{BEsat}), h_{FE} = 10$

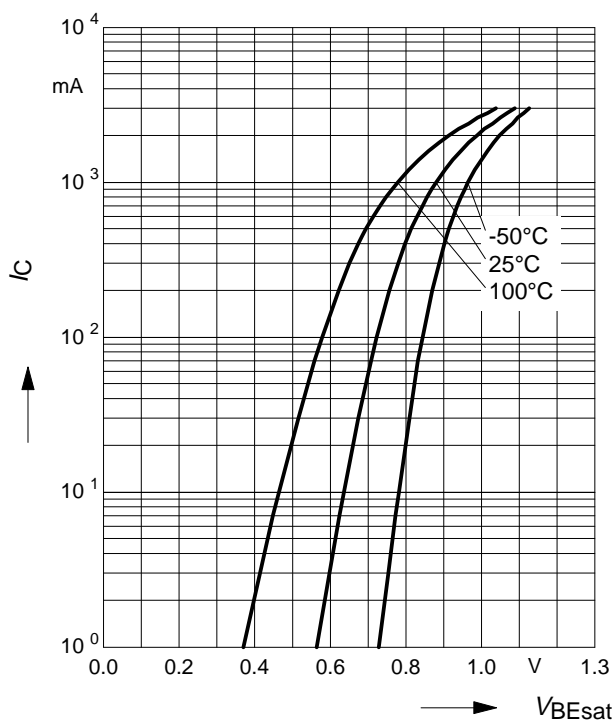

Collector current $I_C = f(V_{BE})$

$V_{CE} = 2V$

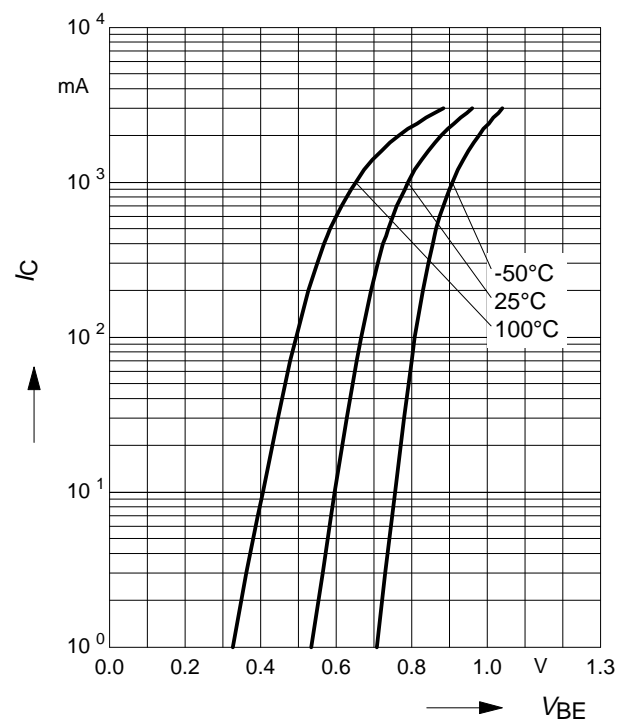



LittleDiode supplies new, hard to find or obsolete electronic components and semiconductors all over the world.

With over two million different components listed you are sure to find the part you need.

Feel free to visit us today at our online store:

LittleDiode.com

Looking forward to providing you with the best possible service.