

Interfacing the X24165/645 to the Motorola 68HC11 Microcontroller

by Applications Staff

This application note demonstrates how the Xicor X24165/645 family of serial memories can be interfaced to the 68HC11 microcontroller family when connected

as shown in Fig. 1. The interface uses two general purpose port D pins to interface to the Serial Memories.

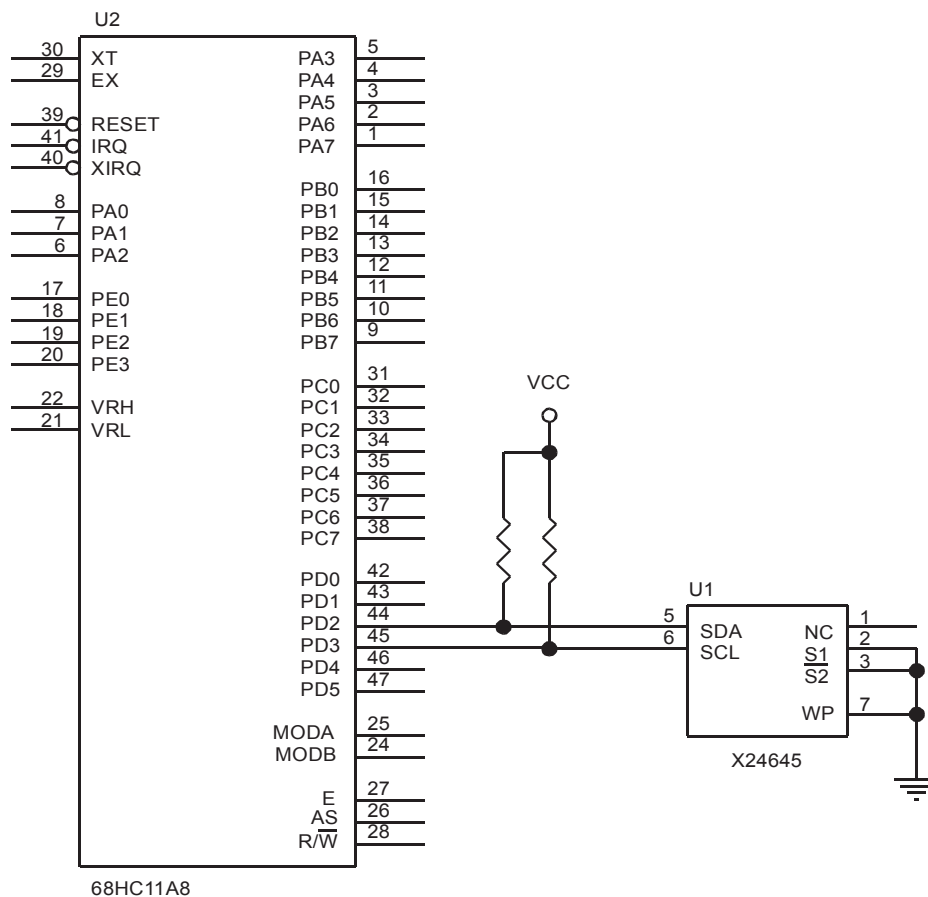


Figure 1. Typical hardware connection for interfacing an X24645 to the 68HC11 microcontroller.



Application Note

```

*****
**
** DESCRIPTION:
**
** This file contains general utility routines written in 68HC11 assembly
** language and used to interface the M68HC11 to XICOR Two-wire Serial Memory
** family (X24xxx). The interface between the 68HC11 and X24xxx devices
** consists of a clock (SCL) and a bidirectional data line (SDA). The
** communication interface uses 2 pins from Port D(PD3 = SCL and PD2 = SDA).
** Other components may reside on this bus provided that they do not have the
** same device identifier byte as the Serial Memory.
** The following table lists all the subroutines in this file with a brief
** description:
**
**          START: Generate the start condition
**          STOP: Generate the stop condition
**          RESET: Issues the appropriate commands to force device reset
**          ProgPage: Transfer from RAM buffer to Serial Memory page
**          ProgByte: Transfer the contents of ByteData to the Serial Memory
**          SeqRead: Read multiple bytes, starting from current address pointer
**          RandomRead: Read a byte from a specific memory location
**          ACKPoll: Return when the write cycle completes.
**          OutACK: Process the acknowledge output cycle
**          GetACK: process the acknowledge from the slave device
**
** The Main program loop programs a test string into the Serial Memory. After
** entire string is programmed, the content of the programmed page is read.
** The read data is stored in the internal RAM. A utility program can be
** written to verify that the buffer content matches the test string.
**

```

```

*****
*
*          INTERNAL RAM
*
*****

```

```

RAMBASE    EQU    $0000    THE INTERNAL RAM BASE ADDRESS(Default)
RAMBuff    EQU    RAMBASE   RAM BUFFER ADDRESS
STACK      EQU    RAMBASE+$FF

```

```

*****
*
*          PROGRAM CONSTANTS
*
*****

```

```

DWOM       EQU    $20      PORT D WOM CONTROL BIT
SDAbit     EQU    $04      PORT D BITS FUNCTIONING AS BIDIRECTIONAL
SCLbit     EQU    $08      SERIAL DATA (SDA) AND SERIAL CLOCK (SCL)
PageNO     EQU    $00      PAGE NUMBER OF THE Serial Memory
BPX        EQU    $18      BPX BITS POSITION IN WPR
WEL        EQU    $02      WEL BIT POSITION IN WPR
RWEL       EQU    $04      RWEL BIT POSITION IN WPR
WPEN       EQU    $80      WPEN BIT POSITION IN WPR
WELon      EQU    0000010b  WEL CONTROL BYTE
RWELon     EQU    00000110b  RWEL CONTROL BYTE
X24165     EQU    0

```



Application Note

AN85

```

X24325    EQU    0
X24645    EQU    1
MaxDelay  EQU    $1000    NUMBER OF TIMES TO CHECK ACKNOWLEDGE POLLING
ByteData  EQU    58H      CHANGES THE x TO AN X IN THE TEST PROGRAM
SeqReadSize EQU    16      BYTE COUNTS TO SHIFT OUT USING SEQ READ

```

IF X24165

```

DeviceID  EQU    $A0      DEVICE SELECT AND TYPE ID
HiADDR    EQU    $0F      MASK FOR UPPER ADDRESS BYTE
WPR_ADDR  EQU    $07FF    WPR PHYSICAL ADDRESS LOCATION (BYTE ACCESS)
PageSize  EQU    32      BYTES PER PAGE

```

ENDIF

IF X24325

```

DeviceID  EQU    $A0      DEVICE SELECT
HiADDR    EQU    $1F      MASK FOR UPPER ADDRESS BYTE
WPR_ADDR  EQU    $0FFF    WPR PHYSICAL ADDRESS LOCATION (BYTE ACCESS)
PageSize  EQU    32      BYTES PER PAGE

```

ENDIF

IF X24645

```

DeviceID  EQU    $80      DEVICE SELECT
HiADDRmask EQU    $3F      MASK FOR UPPER ADDRESS BYTE
WPR_ADDR  EQU    $1FFF    WPR PHYSICAL ADDRESS LOCATION (BYTE ACCESS)
PageSize  EQU    32      BYTES PER PAGE

```

ENDIF

```

*          INTERNAL REGISTERS AND CONTROL BLOCK
*****

```

```

PORTD     EQU    $08      PORT D DATA REGISTER
DDRD      EQU    $09      DATA DIRECTION REGISTER FOR PORT D
SPCR      EQU    $28      SPI CONTROL REGISTER

```

```

*          RESET VECTOR ENTRY POINT
*****

```

```

ORG    $FFFE    RESET VECTOR ADDRESS TO PROGRAM ENTRY
FDB    $E000    JUMP TO BEGINNING OF EXECUTABLE CODE

```

* ASSEMBLER REQUIREMENT- CPU TYPE

P68H11

PAGE

```

*          START OF USER CODE
*****

```



Application Note

AN85

```
ORG $E000
MAIN:
  lds      #STACK          * LOAD STACK POINTER

* INITIALIZE THE BUFFER BEFORE PROGRAMMING THE CONTENT TO A PAGE

  ldy     #RAMBuff        * IY = RAM BUFFER ADDRESS
  ldx     #TestString     * IX = TEST STRING ADDRESS
InitRAM:
  ldaa   0,x              * COPY THE TEST STRING TO
  staa   0,y              * RAM BUFFER
  iny
  inx
  tsta
  bne    InitRAM
  ldx    #$1000           * SET REGISTER BASE
  bset   SPCR,X,#DWOM    * CONFIG. PORT-D AS OPEN DRAIN
  ldaa   #$0C             * PD2 = SCL
  staa   DDRD,X          * PD3 = SDA
  ldaa   #$FF             * CONFIGURE PORT D
  staa   PORTD,X
  jsr    Reset           * RESET THE INTERFACE STATE MACHINE

  ldd    #WPR_ADDR       * READ THE WPR CONTENT AND FIND THE
  jsr    RandomRead      * BLOCKS THAT ARE LOCKED. IF BOTH
  bita   #WPEN           * WPEN BIT AND WP PIN ARE HIGH THEN
  bne    WPEN_OFF        * BPx BITS ARE PROTECTED (WRITES ARE
* ... WARNING ...      * PERMITTED WHEN WP IS BROUGHT LOW).
* MAKE SURE THAT WP PIN IS LOW BEFORE ATTEMPTING TO WRITE NEW VALUE TO
* THE WPR WHEN WPEN BIT IS SET.
WPEN_OFF:
  bita   #BPX            * SKIP IF THE BPx BITS ARE
  beq    NO_BPX          * CLEAR (NO BLOCKS ARE PROTECTED)
  clra   #0               * CLEAR THE BLOCK LOCK BITS (UNPROTECT
  jsr    ProgBP          * THE ENTIRE DEVICE), WAIT FOR
  jsr    ACKPoll         * WRITE OPERATION TO COMPLETE
NO_BPX:
  jsr    SetWEL          * SET THE WRITE ENABLE BIT
  ldd    #WPR_ADDR       * READ THE WPR CONTENT AND
  jsr    RandomRead      * CHECK THAT WEL BIT
  bita   #WEL            * IS SET HIGH
  bne    WRITES_EN      * ELSE ITS A FAILURE
  bra    *               * CHECK THE DEVICE/CONNECTIONS*STOP*
WRITES_EN:
  ldd    #PageNO         * D = PAGE NUMBER OF THE Serial Memory
  ldy    #RAMBuff        * IY = RAM BUFFER ADDRESS
  jsr    ProgPage        * TRANSFER BUFFER CONTENT TO THE PAGE
* IN Serial Memory INDICATED BY D(ab)
  jsr    ACKPoll         * WAIT TILL COMPLETION OF PAGE PROG.
  jsr    ProgByte        * WRITE BYTE TO SERIAL MEMORY
  jsr    ACKPoll         * WAIT TILL COMPLETION OF BYTE PROG.
  jsr    ClrWEL          * RESET THE WRITE ENABLE BIT
  ldd    #PageNO         * D = PAGE NUMBER OF THE Serial Memory
  ldy    #RAMBuff        * IY = RAM BUFFER ADDRESS
```



Application Note

AN85

```
jsr      RandomRead      * SETUP THE ADDRESS POINTER AND READ
staa     0,Y              * FIRST BYTE, SAVE IT TO THE BUFFER
iny      *                * ADJUST THE RAM BUFFER POINTER
ldaa     #.HIGH.PageNO   * LOAD THE UPPER BYTE OF ADDRESS
ldab     #$20             * SPECIFY BYTE COUNT FOR SEQ. READ OP
jsr      SeqRead         * READ/STORE THE REMAINING DATA
bra      *                * END OF MAIN

PAGE
```

```
*****
*** Name: SeqRead
*** Description: Read sequentially from the Serial Memory
*** Function: This subroutine extracts contents of the Serial Memory and stores
***             them into the specified RAM buffer. The total number of bytes to
***             read should be provided along with the buffer address. This
***             routine assumes that the address pointer has already been
***             initialized using the InByte routine.
*** Calls:      Start, SlavAddr, InByte, OutACK, StopRead
*** Input:      IY = RAM Buffer Base Address, A = High Order Address
***             B = Number of bytes to read
*** Output:     None
*** Register Usage: A, B, IY
*****
```

```
SeqRead:
jsr      Start           * START
sec      *               * [C=1] READ OPERATION BIT
jsr      SlavAddr       * SEND THE SLAVE ADDRESS BYTE
SeqReadNxt:
jsr      InByte         * START READING FROM THE CURRENT ADDRESS
staa     0,Y            * TOTAL NUMBER OF BYTES TO READ OUT OF
iny      *               * Serial Memory
decb     *
beq      SeqReadEnd     *
jsr      OutACK         * SEND AN ACKNOWLEDGE TO THE DEVICE
bra      SeqReadNxt
SeqReadEnd:
jmp      StopRead       * END OF READ OPERATION
```

```
*****
*** Name: RandomRead
*** Description: Reads content of the Serial Memory at a specific location.
*** Function: This subroutine sends out the command to read the content of a
***             memory location specified in the (D) register.
*** Calls:      Start, InByte, SlavAddr, OutByte, StopRead
*** Input:      D = Address of the byte
*** Output:     A = Read value
*** Register Usage: A
*****
```

```
RandomRead:
psha
jsr      Start           * START
clc      *               * [C=0] WRITE OPERATION BIT
jsr      SlavAddr       * SEND THE SLAVE ADDRESS BYTE
tba      *               * LOAD THE LOWER BYTE OF THE PAGE
jsr      OutByte        * ADDRESS AND SHIFT OUT TO THE DEVICE
```



Application Note

AN85

```
pula          * RECALL HIGH ADDRESS BYTE
jsr          Start          * START
sec          * [C=1] READ OPERATION BIT
jsr          SlavAddr       * SEND THE SLAVE ADDRESS BYTE
jsr          InByte         * SHIFT IN A BYTE FROM THE DEVICE
jmp          StopRead       * END OPERATION
```

```
*** Name: StopRead
*** Description: Terminate read operation
*** Function: This subroutine is called at the end of a read operation. The
***             routine generates the last ACK clock cycle followed by a stop
***             command. The last ACK bit clock cycle differs from the normal
***             ACK bit in that the SDA line is held high. This action notifies
***             the Serial Memory that it should suspend operation.
*** Calls:      ClockPulse, Stop
*** Input:      None
*** Output:     None
*** Register Usage:  None
```

```
StopRead:
  bset      PORTD,X,#SDAbit      * MAKE SURE THAT THE DATA LINE IS HIGH ...
  bset      DDRD,X,#SDAbit      * CHANGE THE PDx DIRECTION TO OUTPUT
  jsr      ClockPulse          *
  jmp      Stop                * END OPERATION
```

PAGE

```
*** Name: ProgPage
*** Description: Update a page of the Serial Memory
*** Function: This subroutine transfers the contents of the given buffer to the
***             Serial Memory. The caller program must supply the page
***             number of the Serial Memory to update and the base address
***             of the RAM buffer.
*** Calls:      Start, SlavAddr, OutByte, Stop
*** Input:      IY = RAM Buffer Base Address, D(AB) = Page Number
*** Output:     None
*** Register Usage:  A,B
```

```
ProgPage:
  jsr      Start          * START
  clc          * [C=0] WRITE OPERATION BIT
  jsr      SlavAddr       * SEND THE SLAVE ADDRESS BYTE
  tba          * LOAD THE LOWER BYTE OF THE PAGE ADDRESS
  anda      #$0E0         * MASK OUT THE UNWANTED LOWER BITS
  jsr      OutByte        * AND SHIFT OUT TO THE DEVICE
  ldab      #PageSize     * TRANSFER CONTENT OF THE RAM BUFFER

ProgPageNxt:
  ldaa      0,Y          * TO THE Serial MEMORY
  jsr      OutByte        * IY SHOULD BE POINTING TO THE BUFFER
  ldaa      #$0FF        * COVER UP YOUR TRACKS AS BUFFER IS
  staa      0,Y          * READ AND STORED TO THE Serial Memory
  iny          * TOTAL NUMBER OF BYTES TRANSFERED
  decb       * TO THE Serial Memory SHOULD NOT EXCEED
```



Application Note

AN85

```
bne ProgPageNxt * THE PAGE SIZE
jmp Stop * END OF THE OPERATION
```

```
*** Name: ProgByte
*** Description: Write a byte to serial memory
*** Function: This subroutine transfers the contents of ByteData to the
*** Serial Memory. The address written to is conained in the
*** slave address and the byte address D(AB).
*** Calls: Start, SlavAddr, OutByte, Stop
*** Input: D(AB) = Byte Address
*** Output: None
*** Register Usage: A,B
```

```
ProgByte:
jsr Start * START
clc * [C=0] WRITE OPERATION BIT
jsr SlavAddr * SEND THE SLAVE ADDRESS BYTE
tba * LOAD THE LOWER BYTE OF THE PAGE ADDRESS
anda #$0E0 * MASK OUT THE UNWANTED LOWER BITS
jsr OutByte * AND SHIFT OUT TO THE DEVICE
ldaa #ByteData * LOAD THE DATA TO BE WRITTEN
jsr OutByte * SEND OUT DATA TO THE SERIAL MEMORY
jmp Stop *
```

```
*** Name: EnProgWPR
*** Description: Enable updates to Write Protect Register (WPR)
*** Function: This subroutine writes the appropriate sequence to the Serial Memory
*** to enable updating of the WPR. The ProgWPEN and ProgBP routines
*** must call this subroutine before writes to the WPR are allowed.
*** Once this sequence is activated, the only way to exit this mode
*** is by writing to the WPR or resetting the Serial Memory.
*** Calls: RandomRead, SetWEL, SetRWEL
*** Input: None
*** Output: A = INITIAL WPR VALUE
*** Register Usage: A, B
```

```
EnProgWPR:
ldd #WPR_ADDR * READ THE WPR CONTENT AND
jsr RandomRead * TEST THE STATUS OF
bita #WEL * THE WEL BIT AND
bne ProgWPR_1 * SKIP IF ITS SET
psha * ALL WRITES TO THE WPR ARE DISALLOWED
jsr SetWEL * WHEN THE WEL IS CLEAR, SEND SET WEL
pula * COMMAND
ProgWPR_1:
bita #RWEL * CHECK THE RWEL BIT AND
bne ProgWPR_2 * SKIP IF ITS SET
psha * WRITING TO BLOCK-LOCK BITS OR WPEN
jsr SetRWEL * BIT REQUIRE THAT RWEL TO BE SET,
pula * SEND SET RWEL COMMAND
ProgWPR_2:
rts
```



Application Note

AN85

PAGE

```
*****
*** Name: ProgBP
*** Description: Update Block Lock bits in WPR of the Serial Memory
*** Function: This subroutine writes to the WPR of the Serial Memory and
***             changes the BP1:0. The caller program must supply the new values
***             for the BP1:0 bits. This routine retains the original state of
***             the WPEN bit.
*** Calls:      AddrWPR, EnProgWPR, OutByte, Stop
*** Input:      A[1:0] = BP[1:0]
*** Output:     None
*** Register Usage: A, IY
*****
```

```
ProgBP:
  anda    #$03          * MASK OUT THE UNWANTED BITS
  asla                    * SHIFT THE BPx BITS TO THE
  asla                    * BIT POSITIONS 4:3
  asla
  psha                    * SAVE THE BPx NEW VALUES AND
  jsr     EnProgWPR      * ENABLE WRITING TO THE WPR
  anda    #$9A          * CREATE THE DATA PATTERN BY MASKING
  oraa    #$02          * IN THE DESIRED BIT PATTERN AND
  tsy                    * SAVING STATUS OF WPEN BIT
  oraa    0,y           * SET THE BPx BITS PER REQUESTED PATTERN
  staa    0,y           * SAVE THE WPR VALUE ONTO THE STACK
  jsr     AddrWPR       * GENERATE WPR WRITE COMMAND
  pula                    * SHIFT OUT WPR PATTERN
  jsr     OutByte       * TO THE DEVICE
  jmp     Stop
```

```
*****
*** Name: ProgWPEN
*** Description: Update Write Protect Enable bit in WPR of the Serial Memory
*** Function: This subroutine writes to the WPR of the Serial Memory and
***             changes the WPEN bit. The caller program must supply the new
***             value of the WPEN bit. The state of the BP1:0 bits are preserved.
*** Calls:      AddrWPR, EnProgWPR, OutByte, Stop
*** Input:      C
*** Output:     None
*** Register Usage: A, IY
*****
```

```
ProgWPEN:
  clra                    * LOAD THE STATUS FLAGS
  rora                    * MASK OUT THE UNWANTED BITS
  psha                    * SAVE THE WPEN BIT NEW VALUE AND
  jsr     EnProgWPR      * ENABLE WRITING TO THE WPR
  anda    #$9A          * CREATE THE DATA PATTERN BY MASKING
  oraa    #$02          * IN THE DESIRED BIT PATTERN AND
  tsy                    * SAVING STATUS OF WPEN BIT
  oraa    0,y           * SET THE WPEN BIT PER AS REQUESTED
  staa    0,y           * SAVE THE WPR VALUE ONTO THE STACK
  jsr     AddrWPR       * GENERATE WPR WRITE COMMAND
```



Application Note

AN85

```
pula                * SHIFT OUT WPR PATTERN
jsr    OutByte      * TO THE DEVICE
jmp    Stop
```

```
*** Name: SetWEL
*** Description: Set the Write Enable Latch (WEL) bit in the WPR of the Serial Memory.
*** Function: This subroutine writes to the WPR of the Serial Memory and
***           sets the WEL bit.
*** Calls:    AddrWPR, OutByte, Stop
*** Input:    NONE
*** Output:   NONE
*** Register Usage:  A
```

```
SetWEL:
jsr    AddrWPR      * GENERATE WPR WRITE COMMAND
ldaa   #WELon      * SHIFT OUT WEL-ON PATTERN
jsr    OutByte      * TO THE DEVICE
jmp    Stop
```

```
*** Name: ClrWEL
*** Description: Reset the Write Enable Latch (WEL) bit in the WPR of the Serial Memory.
*** Function: This subroutine writes to the WPR of the Serial Memory and
***           resets the WEL bit.
*** Calls:    AddrWPR, OutByte, Stop
*** Input:    NONE
*** Output:   NONE
*** Register Usage:  A
```

```
ClrWEL:
jsr    AddrWPR      * GENERATE WPR WRITE COMMAND
clra                   * SHIFT OUT WEL-OFF PATTERN
jsr    OutByte      * TO THE DEVICE
jmp    Stop
```

```
*** Name: SetRWEL
*** Description: Set Register Write Enable Latch bit in the WPR of the Serial Memory.
*** Function: This subroutine writes to the WPR of the Serial Memory and
***           sets the RWEL bit.
*** Calls:    AddrWPR, OutByte, Stop
*** Input:    NONE
*** Output:   NONE
*** Register Usage:  A
```

```
SetRWEL:
jsr    AddrWPR      * GENERATE WPR WRITE COMMAND
ldaa   #RWELon     * SHIFT OUT RWEL-ON PATTERN
jsr    OutByte      * TO THE DEVICE
jmp    Stop
```

PAGE



Application Note

AN85

```
*****
*** Name: AddrWPR
*** Description: Initiate write operation to the WPR of the Serial Memory.
*** Function: This subroutine issues the WPR address and write instruction
***             to the Serial Memory.
*** Calls:      Start, SlavAddr, OutByte
*** Input:     NONE
*** Output:    NONE
*** Register Usage: A,B
*****
```

```
AddrWPR:
    ldd    #WPR_ADDR
    jsr    Start          * START [ C = OPERATION BIT ]
    clc                    * [C=0] WRITE OPERATION BIT
    jsr    SlavAddr       * SEND THE SLAVE ADDRESS BYTE
    tba                    * LOAD THE LOWER BYTE OF ADDRESS
    jmp    OutByte        * AND SHIFT OUT TO THE DEVICE
```

```
*****
*** Name: SlavAddr
*** Description: Build the slave address for the Serial Memory.
*** Function: This subroutine concatenates the bit fields for Device ID,
***             the high address bits and the command bit. The resultant
***             byte is then transmitted to the Serial Memory.
*** Calls:      OutByte
*** Input:     D(AB) = Page number
***             C = COMMAND BIT (=0 WRITE, =1 READ)
*** Output:    None
*** Register Usage: A
*****
```

```
SlavAddr:
    rola                    * MERGE THE COMMAND BIT
    eora    #DeviceID       * AND THE DEVICE SELECT BITS
    anda    #HiADDRmask    * WITH THE UPPER BYTE OF
    eora    #DeviceID       * PAGE ADDRESS
    jmp    OutByte        * SEND THE SLAVE ADDRESS
```

```
*****
*** Name: OutByte
*** Description: Sends a byte to the Serial Memory
*** Function: This subroutine shifts out a byte, MSB first, through the
***             assigned SDA/SCL lines on port D.
*** Calls:      ClockPulse, GetACK
*** Input:     A = Byte to be sent
*** Return Value: None
*** Register Usage: A
*****
```

```
OutByte:
    bset    DDRD,X,#SDAbit  * CHANGE THE PDx DIRECTION TO OUTPUT
    sec
OutByteNxt:
    rola                    * SHIFT OUT THE BYTE, MSB FIRST
    bcc    OutByte0
    bset    PORTD,X,#SDAbit
    bra    OutByte1
```



Application Note

AN85

```
OutByte0:
  bclr   PORTD,X,#SDAbit
OutByte1:
  jsr    ClockPulse      * CLOCK THE DATA INTO THE Serial Memory
  cmpa   #10000000b     * MEMORY
  clc    * LOOP IF ALL THE BITS HAVE
  bne    OutByteNxt     * NOT BEEN SHIFTED OUT
  jmp    GetACK         * CHECK FOR AN ACK FROM THE DEVICE
```

PAGE

```
*****
*** Name: InByte
*** Description: Shifts in a byte from the Serial Memory
*** Function: This subroutine shifts in a byte, MSB first, through the
***             assigned SDA/SCL lines on port D. After the byte is received
***             this subroutine does not send out an ACK bit to the Serial Memory.
*** Calls:      ClockPulse
*** Input:      None
*** Return Value: A = Received byte
*** Register Usage: A
*****
```

```
InByte:
  ldaa   #00000001b
  bclr   DDRD,X,#SDAbit      * CHANGE THE PDx DIRECTION TO INPUT
InByteNxt:
  jsr    ClockPulse      * CLOCK THE Serial Memory AND SHIFT
  rola   * INTO ACC. THE LOGIC LEVEL ON THE SDA
  bcc    InByteNxt      * LINE. THE DEVICE OUTPUTS DATA ON SDA,
  rts    * MSB FIRST
```

```
*****
*** Name: ClockPulse
*** Description: Generate a clock pulse
*** Function: This subroutine forces a high-low transition on the
***             assigned SCL line on port D. It also samples the SDA
***             line state during high clock period.
*** Calls:      None
*** Input:      None
*** Return Value: C = SDA line status
*** Register Usage: None
*****
```

```
ClockPulse:
  bset   PORTD,X,#SCLbit      * FORCE SCL LINE HIGH. BASED
  nop    * ON AN 8MHz CRYSTAL FREQ. THE SYSTEM
  nop
  clc    * BUS CYCLE TIME IS 0.5 MICROSEC.
  brclr  PORTD,X,#SDAbit,ClockPulseLo *
  sec
ClockPulseLo:
  bclr   PORTD,X,#SCLbit      * LOWER THE CLOCK LINE
  rts
```

```
*****
```



Application Note

AN85

```
*** Name: OutACK
*** Description: Send out an ACK bit to the Serial Memory
*** Function: This subroutine changes the direction of the SDA pin on port D
***             and then clocks an ACK bit to the Serial Memory. The ACK
***             cycle acknowledges a properly received data by lowering the
***             SDA line during this period (9th clock cycle of a received
***             byte). The direction of the SDA pin is programmed as input
***             prior to returning to the caller.
*** Calls:      ClockPulse
*** Input:      None
*** Return Value: None
*** Register Usage: None
*****
```

```
OutACK:
    bclr    PORTD,X,#SDAbit      * MAKE SURE THAT THE DATA LINE IS LOW    ...
    bset    DDRD,X,#SDAbit      * CHANGE THE PDx DIRECTION TO OUTPUT
    jmp     ClockPulse          *
```

```
*****
*** Name: GetACK
*** Description: Clock the Serial Memory for an ACK cycle
*** Function: This subroutine changes the direction of the SDA pin on port D
***             and then clocks the Serial Memory. It returns the sampled
***             logic level on the SDA during high clock cycle. The Serial Memory
***             acknowledges a properly received command/data by lowering the
***             SDA line during this period (9th clock cycle of a transmitted
***             byte). If the SDA state is HIGH, it signifies that either it
***             did not receive the correct number of clocks or it's stuck in
***             previously initiated write command,
*** Calls:      ClockPulse
*** Input:      None
*** Return Value: C = ACKnowledge bit
*** Register Usage: None
*****
```

```
GetACK:
    bclr    DDRD,X,#SDAbit      * CHANGE THE PDx DIRECTION TO INPUT
    jsr     ClockPulse          * CLOCK THE Serial Memory
    bset    DDRD,X,#SDAbit      * CHANGE THE PDx DIRECTION TO OUTPUT
    rts
```

PAGE

```
*****
*** Name: ACKPoll
*** Description: Wait for an ACK from the Serial Memory
*** Function: This subroutine sends a slave address to the Serial Memory and
***             monitors the SDA for an ACK signal. It returns if a low
***             logic level is detected on the SDA during high clock cycle of
***             the acknowledge cycle. The Serial Memory does not respond to any
***             commands with an acknowledge bit while the store operation
***             is in progress. If no ACK is received another slave address is
***             sent to the Serial Memory. The number of iteration is specified
***             by the MaxDelay constant.
*** Calls:      Start, SlavAddr, Stop
*** Input:      None
```



Application Note

AN85

*** Return Value: C = ACKnowledge bit [=0 ACK ,=1 No ACK was received]
*** Register Usage: A, B, IY

ACKPoll:

```
    ldy    #MaxDelay      * LOAD MAX NO. OF ACK POLLING CYCLE
ACKPollnxt:
    jsr    Start          * START THE ACK POLL CYCLE AND
    ldd    #PageNO       * D = PAGE NUMBER OF THE Serial Memory
    clc                    * [C=0] WRITE OPERATION BIT
    jsr    SlavAddr      * SEND THE SLAVE ADDRESS. THEN
    *                      * MONITOR THE SDA LINE FOR AN ACK FROM
    *                      * THE Serial Memory. TERMINATE THE
    jsr    Stop          * OPERATION BY A STOP CONDITION.
    bcc    ACKPollExit   * EXIT IF THE ACK WAS RECEIVED
    dey
    bne    ACKPollnxt    * LOOP WHILE THE MAXIMUM NO. OF CYCLES
    *                      * HAVE NOT EXPIRED. ELSE RETURN WITH C=1
```

ACKPollExit:

```
    rts
```

*** Name: Start
*** Description: Send a start command to the Serial Memory
*** Function: This subroutine generates a start condition on the bus. The start
*** condition is defined as a high-low transition on the SDA
*** line while the SCL is high. The start is used at the beginning
*** of all transactions.
*** Calls: None
*** Input: None
*** Return Value: None
*** Register Usage: None

Start:

```
    bset   PORTD,X,#SDAbit * FORCE THE SDA LINE HIGH
    bset   PORTD,X,#SCLbit * FORCE THE SCL CLOCK LINE HIGH
    bclr   PORTD,X,#SDAbit * BEFORE TAKING THE SDA LOW
    nop
    nop
    nop
    nop
    bclr   PORTD,X,#SCLbit * FORCE THE SCL LOW
    rts
```

*** Name: Stop
*** Description: Send stop command to the Serial Memory
*** Function: This subroutine generates a stop condition on the bus. The stop
*** condition is defined as a low-high transition on the SDA
*** line while the SCL is high. The stop is used to indicate end
*** of current transaction.
*** Calls: None
*** Input: None
*** Return Value: None
*** Register Usage: None



Application Note

AN85

```
Stop:
  bclr   PORTD,X,#SDAbit      * FORCE THE SDA LOW BEFORE TAKING
  bset   PORTD,X,#SCLbit      * THE SCL CLOCK LINE HIGH
  nop
  nop
  nop
  nop
  bset   PORTD,X,#SDAbit      * FORCE THE SDA HIGH (IDLE STATE)
  rts
```

```
*****
*** Name: Reset
*** Description: Resets the Serial Memory
*** Function: This subroutine is written for the worst case. System interruptions
***            caused by brownout or soft error conditions that reset the main
***            CPU may have no effect on the internal Vcc sensor and reset
***            circuit of the Serial Memory. These are unpredictable and
***            random events that may leave the Serial Memory interface
***            logic in an unknown state. Issuing a Stop command may not be
***            sufficient to reset the Serial Memory.
*** Calls:      Start, Stop
*** Input:      None
*** Return Value: None
*** Register Usage: B
*****
```

```
Reset:
  ldab   #$0A                 * APPLY 10 CLOCKS TO THE DEVICE. EACH
ResetNxt:
  jsr    Start                * CYCLE CONSISTS OF A START/STOP
  jsr    Stop                  * THIS WILL TERMINATE PENDING WRITE
  decb                         * COMMAND AND PROVIDES ENOUGH CLOCKS
  bne    ResetNxt             * FOR UNSHIFTED BITS OF A READ
  rts                          * OPERATION
```

```
TestString: FCC      'XICOR MAKES IT MEMORABLE!'
             FCB      $00
```

```
*****
*** END OF X24xxx Serial Memory INTERTERFACE SOURCE CODE
*****
```

END



LittleDiode supplies new, hard to find or obsolete electronic components and semiconductors all over the world.

With over two million different components listed you are sure to find the part you need.

Feel free to visit us today at our online store:

LittleDiode.com

Looking forward to providing you with the best possible service.